



“Galaxy”

Remote control for chronothermostat

GALAXY is a remote control of ergonomic design for Selmo chronothermostats, equipped with a large backlit display.

GALAXY is equipped with a double infrared transmitter to optimize communication with the thermostat.

In the package is also included its wall mount holder.

It is also compatible with open window, ASC and ECO functions.

GALAXY is a certified product:



Available colors: -White

GALAXY complies with the directives:

-Eco-design Directive for Energy-using Products, 2005/32/EC (<0,5W).

EN 62233:2008

EN 55014-1:2006 + A1:2009 + A2:2011

EN 55014-2:1997 + A1:2001 + IS1:2007 + A2:2008 ==> Cat. 2

EN 61000-3-2:2014

EN 61000-3-3:201



“Galaxy”

Remote control for chronothermostat

Technical features

Product	Remote control
Applications	Thermostats and Chronothermostats
Color	White
Display	LCD
Keypad	7 keys keypad
Temperature selection	Digital
Mode selection	Digital
Operative modes and activable functions	Comfort, Night, Antifreeze, Stand-by, Crono, Fil-Pilote, Boost 2h, ECO, Open window relevation, ASC , Keys lock.
Impostable temperature range	7°C ÷ 30°C
Operating temperature range	-10°C ÷ +40°C
Batteries	2x1,5V, Tipo AAA
Signal transmission	Infrared (via 2 transmitters)
Dimensions	109 x 52 x 29mm(HxL x I)
Fixing	Wall fixing using the appropriate support
Warranty	2 years



Notes

Repairs: Must be carried out by an authorized service center.

Compatibility with other products: Contact your supplier.

Warranty: 2 years warranty from the date of purchase.

The warranty does not cover the following cases:

- Products that are tampered with or damaged by the customer;
- Products that have been installed or used by the customer in a manner inconsistent with what is specified in this manual;
- Products that have been modified by the customer.



“Galaxy”

Remote control for chronothermostat

Functions

- 7 possible modes of operation.

The remote control enables the following operating modes in the chronothermostat:

- **"Comfort"** mode.
- **"Night"** mode.
- **"Antifreeze"** mode.
- **"Fil-Pilote"** mode.
- **"Crono"** mode.
- **"Boost 2h"** mode.
- **"Stand-by"** mode.

N.B. for a complete description of the operating modes, please refer to the thermostat user manual.

- **ECO function:** Fast activation mode; through the dedicated key, the function lowers the temperature by 3°C.
- **"Open window detection", "ASC" and "Key-lock"**.
N.B. these modes are not available on every model of clock thermostat
- Settable "Comfort" and "Night" temperature.
- **Daily and weekly program** for the user to set as desired.
- Display with permanent indication of the set temperature, time and mode of operation.



“Galaxy”


Remote control for chronothermostat





“Galaxy”

Remote control for chronothermostat

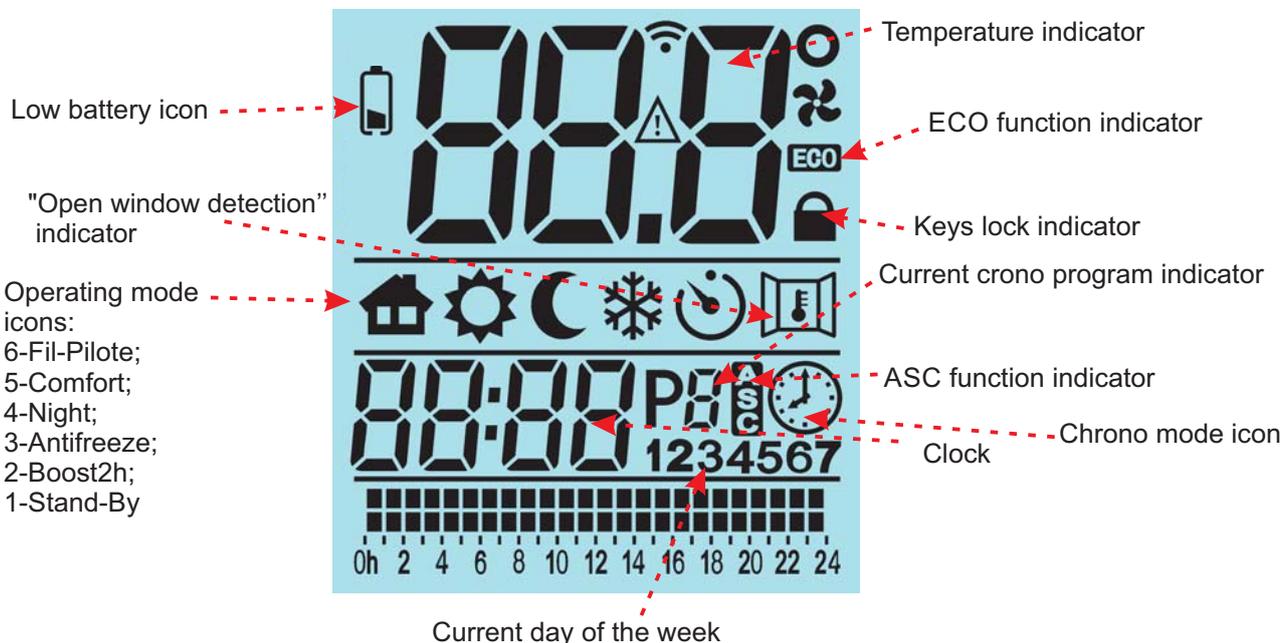

- **Power ON / Stand-by**

Press the **[On/Stand-by]** key to turn on the device or to enter the "Stand-by" mode. When the device is turned on, the display shows the set temperature, mode and time. In "Stand-by" mode the current time and day of the week are displayed.

- **Operating modes**

Press the **[Mode]** key to select the desired operating mode. An icon on the display indicates the selected operating mode (as in the legend below).



Comfort Mode

The "Comfort" temperature corresponds to the temperature the user desires.

This operating mode is intended for the ordinary use of the thermostat.

- Press the **[Mode]** key until the "Comfort" icon is shown on the display.
- Set the desired temperature through the **[+]** and **[-]** keys.

Night Mode

The "Night" mode allows setting a temperature value lower than the "Comfort" temperature. This operating mode should be selected during the night or when the room is not occupied for 2 hours or longer.

- Press the **[Mode]** key until the "Night" icon appears on the display.
- Set the desired temperature through the **[+]** and **[-]** keys.



“Galaxy”

Remote control for chronothermostat

Chrono Mode

"Comfort" and "Night" temperatures and the operating time intervals can be configured.

To enable the “Chrono” function, press the **[mode]** key until the "Chrono" icon is shown on the display.

How to set the time sequence: press the **[Chrono]** key to enter the setting mode.

Setting time and date:

- The flashing digit indicates the day of the week: press the **[+]** and **[-]** keys to set the desired day,
- Press **[mode]** to confirm.
- Use the **[+]** and **[-]** keys to set the hour and then **[mode]** to advance to the minutes setting.
- Repeat the same procedure to set the minutes. Press **[mode]** to confirm.


Setting the weekly schedule:

The programming starts automatically from day 1 and 00:00 o'clock.

- The **[+]** key sets the "Comfort" temperature in the indicated hour, marked with a full bar;
- The **[-]** key sets the "Night" temperature marked with an empty bar.

- At each **[+]** or **[-]** key press, the program will advance automatically to the following hour.

See an example on the right.

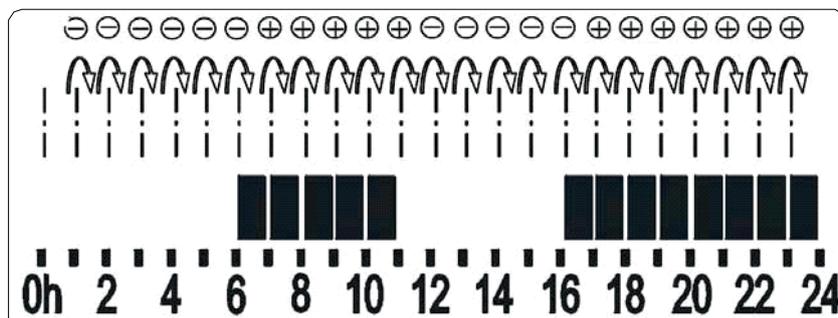

Press **[mode]** to confirm and advance to the following day.

Once the 7th day has been configured, the program returns automatically to the previous operating mode.

Anti-ice mode

The “Anti-ice” mode enables the heating element of the chronothermostat when the room temperature drops below 7°C (please refer to the thermostat user manual).

It is recommended to use this mode when the room is not occupied for several days.

- Press the **[mode]** key until this mode is selected.

Boost 2h mode

The "Boost 2h" mode can be used to quickly heat the room.

- To enable the function, press the relative **[boost2h]** key, the "2h" icon is shown on the display.
- The user can exit this mode by pressing the **[boost2h]** key, the **[On/Stand-by]** key or **[mode]**.

Fil-pilote

- Press the **[mode]** key and select the "Fil-Pilote" mode, the relative icon will show on the display.
- Set the desired temperature through the **[+]** and **[-]** keys.




“Galaxy”

Remote control for chronothermostat

Battery and wall support mounting



To insert the batteries, pull out the plastic flap of the dedicated compartment, making a little pressure over the cleats and sliding the flap down. Then insert 2x1.5V AAA batteries paying attention to the direction, indicated inside the body, close the door by inserting it from the bottom and pull it up until you can hear the joint.

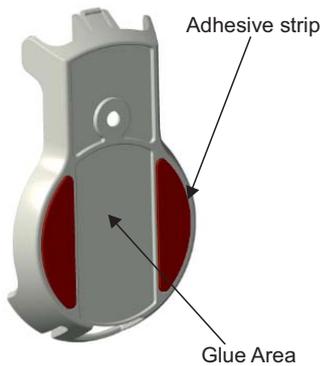

For the wall mounting of the remote control it is possible to use the two-sided adhesive strips in the remote control holder. You can add, on glue area a small amount of silicone glue supplied in the package to allow a better fixing.

There is also a screw and a dowel to fix the support with a wall hole

Dowel dimensions: Diameter 5mm, Length 25mm.



To place the remote control in the support, insert it from top to bottom, matching the tooth of the support with the corresponding hole in the remote control. In the image on the right is shown the correct insertion of the remote control in the support.





“Galaxy”

Remote control for chronothermostat

3. Functions

Key-lock

This function allows the user to block the keypad to avoid undesired key pressures. To enable the Key-lock function, press simultaneously the **[mode]** and **[+]** keys for 3 seconds. To disable the function, repeat the same procedure.

ECO mode

The "ECO" function can be used to reduce the electric consumption when the room is not occupied for a certain period.

- To enable the function, press the dedicated **[ECO]** key. Every temperature previously set is lowered by 3°C. The “ECO” icon is shown on the display.
- To disable this function, press again the **[ECO]** key.

NOTE: This function is not available on every chronothermostat model; please refer to the user manual for a precise description of the function.

ASC FUNCTION

To enable the "ASC" function press the **[mode]** key until the "Chrono" icon is shown on the display.

- press simultaneously the keys **[ECO]** and **[+]** for at least 3 seconds.
- To disable this function, repeat the procedure.

NOTE: This function is not available on every chronothermostat model; please refer to the user manual for a precise description of the function.

NOTE: This function is only available in the “Chrono” mode

OPEN WINDOW DETECTION FUNCTION

- To enable the "open window detection" function, press simultaneously the **[ECO]** and **[-]** keys for at least 3 seconds.
- To disable this function, repeat the procedure.

NOTE: This function is not available on every chronothermostat model; please refer to the user manual for a precise description of the function.

Low battery warning: when the battery power is low, the relative icon appears on the display. The batteries must be replaced as soon as possible.

Note: The signal is transmitted from the remote control to the thermostat after one second from the last key pressure.

N.B. Some functions may be not supported on your thermostat. Please refer to the user manual.

The manufacturer reserves the right to make changes at any time as it deems necessary to improve the product without prior notice.

DISPOSAL



This appliance is not an ordinary waste. It must be disposed of through appropriate collection centers. In case of replacement, it can be returned to the distributor.

This end-of-life treatment of the product will allow us to preserve our environment and to curb the consumption of natural resources.

This symbol applied to the product indicates the obligation to deliver it to the appropriate collection centers to be disposed of in compliance with Directive 2002/96 / CE (WEEE).