



“Infinity”

Wi-Fi instructions iOS

ACTIVATION WI-FI FUNCTIONALITY

Wi-Fi icon:

Off: Wi-Fi is off.

Blinking: Wi-Fi active while waiting to be connected to the network.

On: Wi-Fi connected to the network or device.

NOTE: To use Wi-Fi mode, you must set the date and time first.

Turn on / off WIFI mode

Refer to chapter 4, par. "c" of INFINITY manual.

Reset Internet Configuration:

From the state of standby, hold the "TIMER" button until you enter the settings menu.

Use the [+] and [-] buttons to scroll to "rEst", confirm with the [Mode] button and confirm with the [+] button again, system restart.

App iOS (install application "Selmo Comfort" from app store and create an account) :

Point-to-Point Operation:

Turn on the thermostat. The WI-FI icon will flash. From the tablet / smartphone go to Settings ----> Wi-Fi and select the thermostat ID network "SELMO WiFi system".

Once connected, open the Selmo comfort app. A notice will inform you that you are connected to the network and that the app can only run point-to-point. Tap the menu icon on the top left to open the app menu, and select "Connection with socket". After a few seconds, the thermostat screen will be opened and you will be able to manage it.

Internet connection Operation:

After point to point connected, If you want to connect the thermostat to the internet go to the app menu and select "configure", then choose Your WI-FI network and (if provided by the Wi-Fi network) enter the password. Once the thermostat is connected to the internet, open the app (with a phone / tablet normally connected to the internet) and choose the thermostat from the list. (If the list of thermostats linked with the account does not appear, open the menu and select "online thermostats") The thermostat screen will open and you can check it.

If the thermostat has never been linked with your account, it will not appear on the list. From the app, press + on the top right and there will be displayed a six-digit PIN.


Place the thermostat in standby mode and press the timer until it enters the menu. Navigate with + and - to "Pair", and select with the MODE button. To enter the PIN, keep in mind that the thermostat keys correspond to:

Chrono = 1

ECO = 2

"+" = 3

"-" = 4

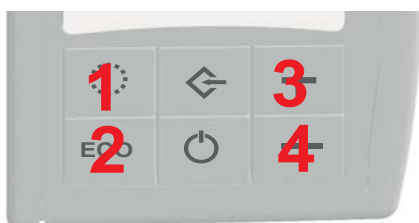

Once the pin is inserted the thermostat will appear in the thermostat list of the app.